

Assembly Instructions

Assemble the Center (Longer) Limbs


Each Limb Requires:

- (1) 46" Unsplit Limb | (1) Long Split Limb
- (1) Short Split Limb | (2) Shroud Retainers (Black pins)



SCAN FOR
ASSEMBLY
VIDEO

- Step 1:** Measure from one end of the unsplit limb about 5", and make a mark.
- Step 2:** Take one of the short, split limbs and, putting the un-split end on first, slide it onto the marked end of the long limb, stopping at the mark.
- Step 3:** Measure about 2" up from the bottom of that short split limb and make another mark.
- Step 4:** Use the included drill bit to drill a hole on your mark.
- Step 5:** Insert a Shroud retainer into the drilled hole.
- Step 6:** Fold back the split "leaves" and hold them against the stem.
- Step 7:** Take the long split limb and slide it into the top of the previously assembled 2 limbs until it stops.
- Step 8:** Measure about 2" below the start of the split on the short limb and make a mark.
- Step 9:** Drill another hole on that mark.
- Step 10:** Insert a shroud retainer clip attaching all 3 pieces together.
- Repeat the same process above for the remaining 5 center limbs.**

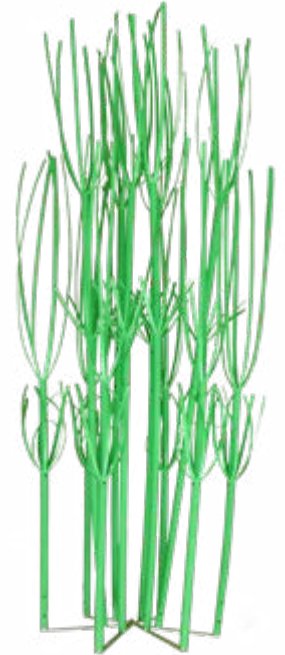

Assemble the Base & Attach Center Limbs

- Step 1:** Stack each of the 3 steel sections on top of each other, lining up the slotted center hole.
- Step 2:** Slide one of the flat washers onto the bolt, and then insert the bolt, from the top, through the 3 pieces of base.
- Step 3:** Slide a flat washer and nut onto the bolt, and for now, just hand tighten.
- Step 4:** Lay the base on its side – **the sections could move and pinch your fingers, so be careful when moving it around until it's fully tightened.**
- Step 5:** Slide each of the limbs onto the middle 6 uprights on the base.
- Step 6:** Align the hole on the limb with the hole on the base, and insert the shroud retainer clip.
- Repeat this for all of the center limbs.**



WARNING
Drowning hazard. Do not
install where swimming
and diving may occur.

Assemble & Install the Outer (Shorter) Limbs

Each Limb Requires: (6) Pre-Assembled Limbs | (6) 10" Stems

- Step 1:** Insert the stem into the bottom of the pre-assembled limb so the two are flush with each other.
- Step 2:** Measure about 2-1/4" up from the bottom and make a mark.
- Step 3:** Drill a single hole on your mark.
- Step 4:** Align the hole on the limb with the hole on the base and insert the retainer clip.
- Repeat these steps for the remaining 5 outer limbs.**

Install and Go Fishing!

When you are ready for installation, spread the 3 sections of the base into a star pattern and fully tighten the hardware with the socket and wrench. Fold the leaves back onto themselves to spread them out as necessary. Toss into the water and watch it sink!

Package Contents

- (3) Sections of 34" Galvanized Steel
- (6) Fully Assembled Limbs*
*1 retainer shroud already installed in each near the middle of the limb
- (6) 46" Unsplit Limbs
- (6) Long Split Limbs
- (6) Short Split Limbs
- (6) 10" Stems
- (24) Shroud Retainers
- (1) 1-1/2" x 3/8" Bolt
- (2) 3/8" Flat Washers
- (1) 3/8" Lock Washer
- (1) 3/8" Nut
- (1) 1/4" Drill Bit

Tools Needed for Assembly

- 9/16" socket
- 9/16" wrench
- Cordless drill
- Felt Tip Marker
- Tape Measure